

TANG BREAK-OFF TOOLS

MANUAL

Part Number	Description
59060	M2
59090	M3
59130	M4
59160	M5
59190	M6
59250	M8
59280	M10
59380	M12

SPRING & PNEUMATIC

Description	SPRING Part Number	PNEUMATIC Part Number
2-56, M2, M2,2	59061	59062
3-48, 3-56, M2,5	59071	59072
4-40, 4-48	59081	59082
5-40, M3	59091	59092
6-32, 6-40, M3,5	59101	59102
8-32, 8-36, M4	59121	59132
10-24, 10-32, 12-24, M5	59141	59142
1/4-20, 1/4-28, M6	59181	59192
5/16-18, 5/16-24, M8	59241	59252
3/8-16, 3/8-24, M10	59291	-
1/2-12 1/2-13, M12	59332	59331
M14-1,5	59462	59381

EXTRACTING TOOLS

Part Number		Description
50001	M2 - M4	2-56 - #8
50002	M3 - M10	4-40 - 3/8
50003	M4 - M24	6-32 - 1"
50004	M20 - M39	1 1/8" - 1 1/2"
50005	M38 - M65	1 1/2" - 2 1/2"